

memememememememe

III) = IIII = 11113

2 IIII 3111 ≣∭

3

11113

11113

311 3111

III) 🗄

MEME

: ||||) =

CONNECTING TO A DIESEL FUEL SYSTEM

When connecting the Wynn's MultiSERVE machine to a diesel fuel system we need to locate the common feed and return. We connect the feed to the low pressure side of the fuel system before or after the filter dependant on the most accessible connection.

(Wynn's) MUltiSERVE

3111

300

300

3111

主册主册主册主册主册主册主

Emememememememe

3III) 3III)

MSMSM3

300300300

3111 3111

1))) 1))) 1))

())) 三()))

ememen

III) = III) = III

31113

EIIIE **III EII**

1

3

11113

IIII = IIII =

3III 3 III 3 IIII 3 III 3 IIII 3 III 3 III

MEMEMEMEMEME

=m=m=m=m=m=m

EMEMENEMEMEM


30030


11113


When connecting the return, locate the common point of connection. This is where the system returns have met to be returned to the fuel tank. The main returns come from the: fuel pump, fuel rail and injector spill.


A connection after theses three points have met means we return the treatment back to the machine not the fuel tank. Some vehicles facilitate a connection in the engine bay however some vehicles require a connection closer to the fuel tank. Identifying the single common return line is important for the correct connection to the MultiSERVE machine.


Always form a loop from the fuel tank feed and return when carrying out a MultiSERVE Injection or Turbo clean.

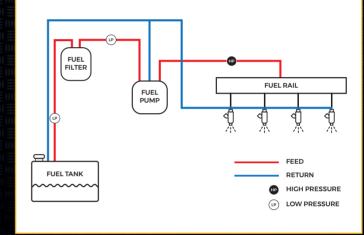

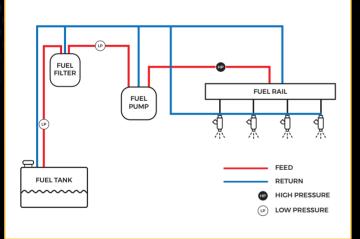

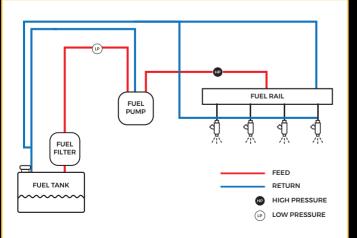

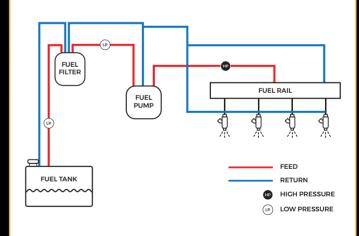

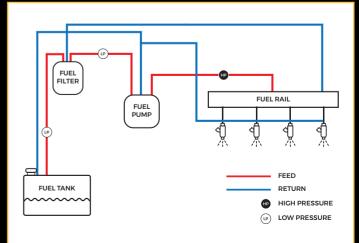



MEME

3M3M3M

III) 🗄

3

11111 11113 11111 11113

3m3m

3

III) 🗄

3

MEMEME

3

tank, these systems require a feed and return connection to and from the MultiSERVE machine for correct operation however, some petrol engine return systems are control by the fuel pump and fuel rail and do not have a return back to the fuel tank. Connecting the machine to these fuel systems requires only a feed from the MultiSERVE machine.

MIEMIEMIEMIE

11111

₩**Ξ**₩

III) 三III)

2 M 2

Enne 1111 三1111

(

(()) 311 1)||

11113

11113

11113


SMSMSMSMSMSM

300300

Emememe

When operating the machine with only a feed to the fuel system we must disable the fuel pump by removal of the fuel pump fuse, fuel pump relay or disconnection at the fuel pump.

Note :- always double check, you may see a pipe which you think is a return pipe which runs alongside the feed this could be the pipe from the carbon canister

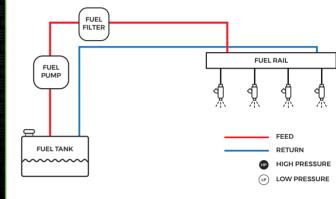

1111三 11113

:IIII ~ IIII ~

zwzwzwzwzwzwzwzwzw

11113

MEME

MEMEMEME

11111 11113

3111

31113111

11113

